



Design Luxy R&D
Model 18090B
Code 4GI1802

LIGHT

DESCRIPTION

LIGHT: Directional office chair, medium backrest, with chrome-plated aluminum armrests, gas lift mechanism, polished aluminum base, with Ø 65 mm black castors.

BACKREST: Load-bearing structure in PVC; padding in flame-retardant expanded polyurethane.

SEAT: Load-bearing structure in PVC; padding in flame-retardant expanded polyurethane.

STRUCTURE: High-strength steel frame, round section Ø 25 mm with 1.5 mm thickness, with chrome or epoxy powder-coated finish.

UPHOLSTERY: SERIES 18000: Removable cover; seat padding in expanded polyurethane, density 50 kg/m³, thickness 80 mm; backrest padding in expanded polyurethane, density 30 kg/m³, thickness 40 mm.

ARMRESTS: Die-cast aluminum armrests with chrome or epoxy powder-coated finish.

MECHANISM: Gas lift plate.

BASE: Die-cast aluminum base with chrome or epoxy powder-coated finish.

RUOTE: Self-locking Ø 65 mm rubberized castors, black for colored bases, white for white base, chrome for chrome base.

USAGE INSTRUCTIONS

Use of the entire seat surface The anatomical seat surface must be fully occupied. Only then is correct contact with the backrest guaranteed, ensuring adequate support.

Correct seat height adjustment Correct seat height means: an elbow angle of approximately 90° when the forearm rests horizontally on the work surface; a knee angle of approximately 90° when the feet are fully resting on the ground.

Dynamic seating To sit dynamically, one should change posture frequently, alternating as often as possible between forward and backward sitting positions.

Usage This office swivel chair must be used only as intended, observing general safety precautions. Improper use (e.g., using it as a ladder, sitting on the armrests, or placing heavy uneven loads) may result in accidents.

MAINTENANCE AND CLEANING

Plastic parts Clean using a detergent based on neutral soap. Do not use aggressive cleaning agents.

Upholstery and padding Any stains on the fabric can be removed using gentle, neutral detergents or specific products indicated by the manufacturer as sanitizing and water-repellent, to better preserve the fabric condition. Padding that shows structural issues requiring maintenance must be handled exclusively by specialized personnel.



SUPPORT


Le Service operations, such as replacement or interventions on the gas lift system, must only be performed by specially trained personnel. Requests must be sent directly to LUXY, the manufacturer, via the phone or email contact listed at the bottom of the technical sheet. Any maintenance or component replacements carried out by unauthorized personnel will void the warranty.

WARRANTY

Our products are guaranteed for 5 (five) years and cover manufacturing defects or material flaws not caused by improper or incorrect use (e.g., component overloads, impacts, or tears). The warranty is based on standard daily use of 8 (eight) hours with a maximum load of 110 kg. Excluded from the warranty: excessive or incorrect use, natural wear of materials (fabrics, wheels, mechanisms, and gas lifts), damage due to interventions performed outside the manufacturer's facilities, and damage caused by humid environments or those containing salt or acids. Our warranties reflect the craftsmanship applied to the manufacturing materials and not the intrinsic qualities of the materials themselves.

PRODUCT INFORMATION

The materials used are recyclable. At the end of its use, do not disperse the product into the environment—dispose of it according to the type of material. The company reserves the right to make changes to this catalog and production without prior notice.

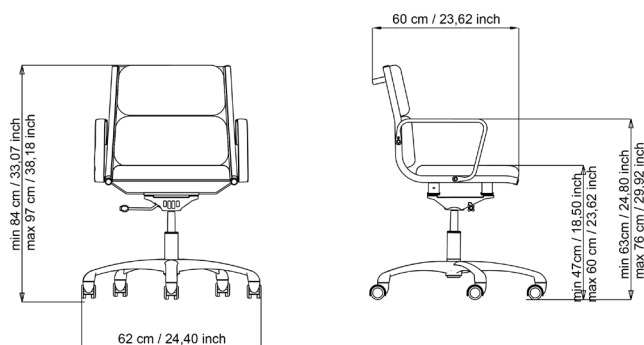

aderente a

